My Tel Pros is a nationwide NEC Technology Services Distributor

\ Orchestrating a brighter world   NEC

UNIVERGE BLUE® CONNECT
QUICK START GUIDE
Yealink T57W

WELCOME TO UNIVERGE BLUE®CONNECT

All of your business communications
integrated, efficient and reliable.

What's in the box?

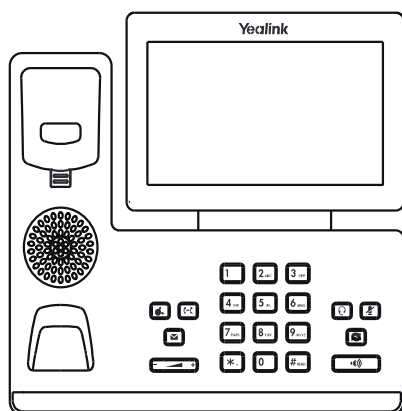## Yealink T57W

A. Phone
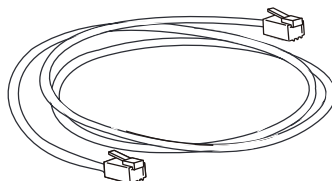**B.** Ethernet Cable
C. Handset Cable
D. Handset

E. Stand
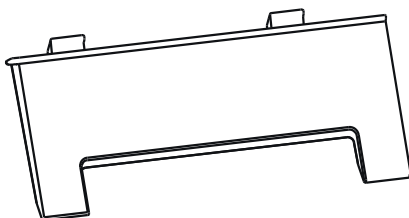**F.** Power Adapter

A.

B.

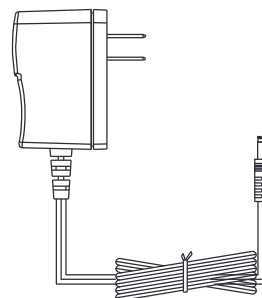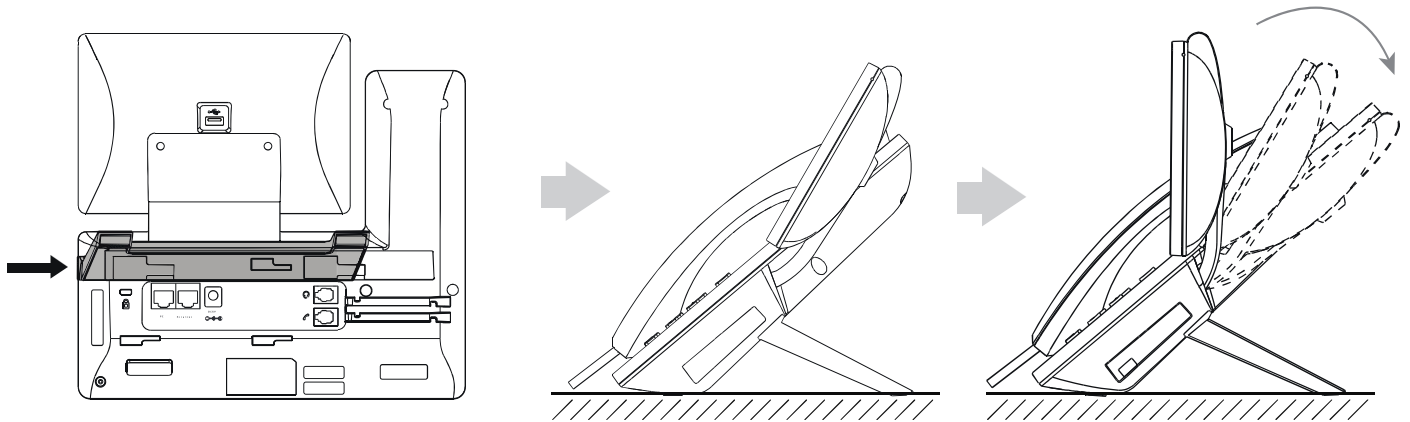**C.**
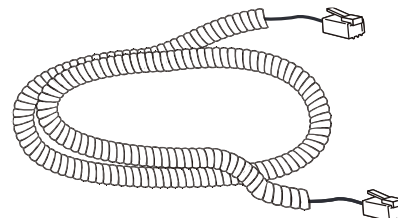
D.

E.

F.

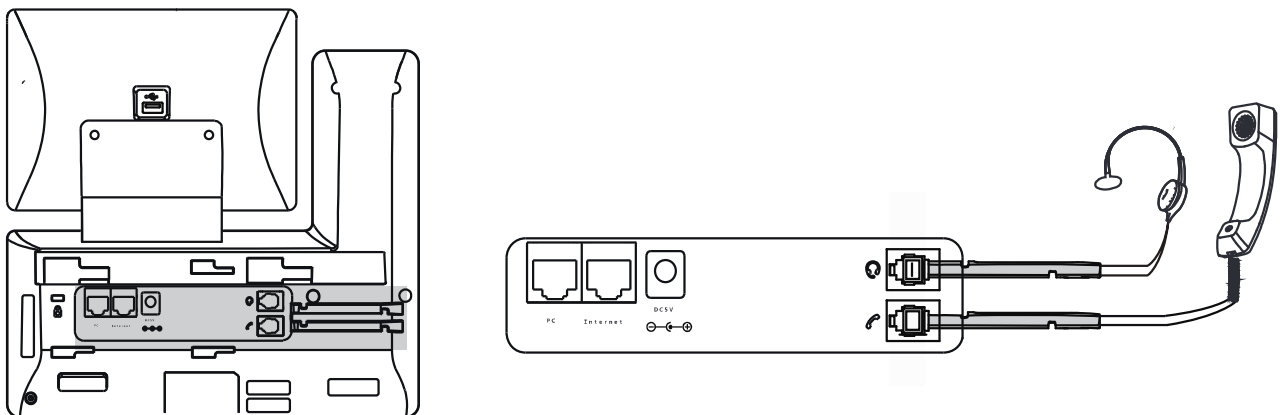# Guided Setup

Assembling Your Phone

Attach the stand, and adjust the angle of the screen, as shown below.

Connect Handset and Optional Headset

Note: Your phone supports headsets using a RJ9 cable.

For connection directions, refer to your headset documentation.

Connect Cables

Please follow the diagram to install your phone. Once plugged in, the phone will automatically download its configuration and start to work. The voicemail box will be functional with a default greeting.

PC Connection
(Optional)

Internet

Power
Adapter
(DC 5V)

Ⓐ
AC Power

Ⓑ
PoE
(Power over Ethernet)

PC Connection
(Optional)

IEEE 802.3af compliant
PoE Hub/Switch
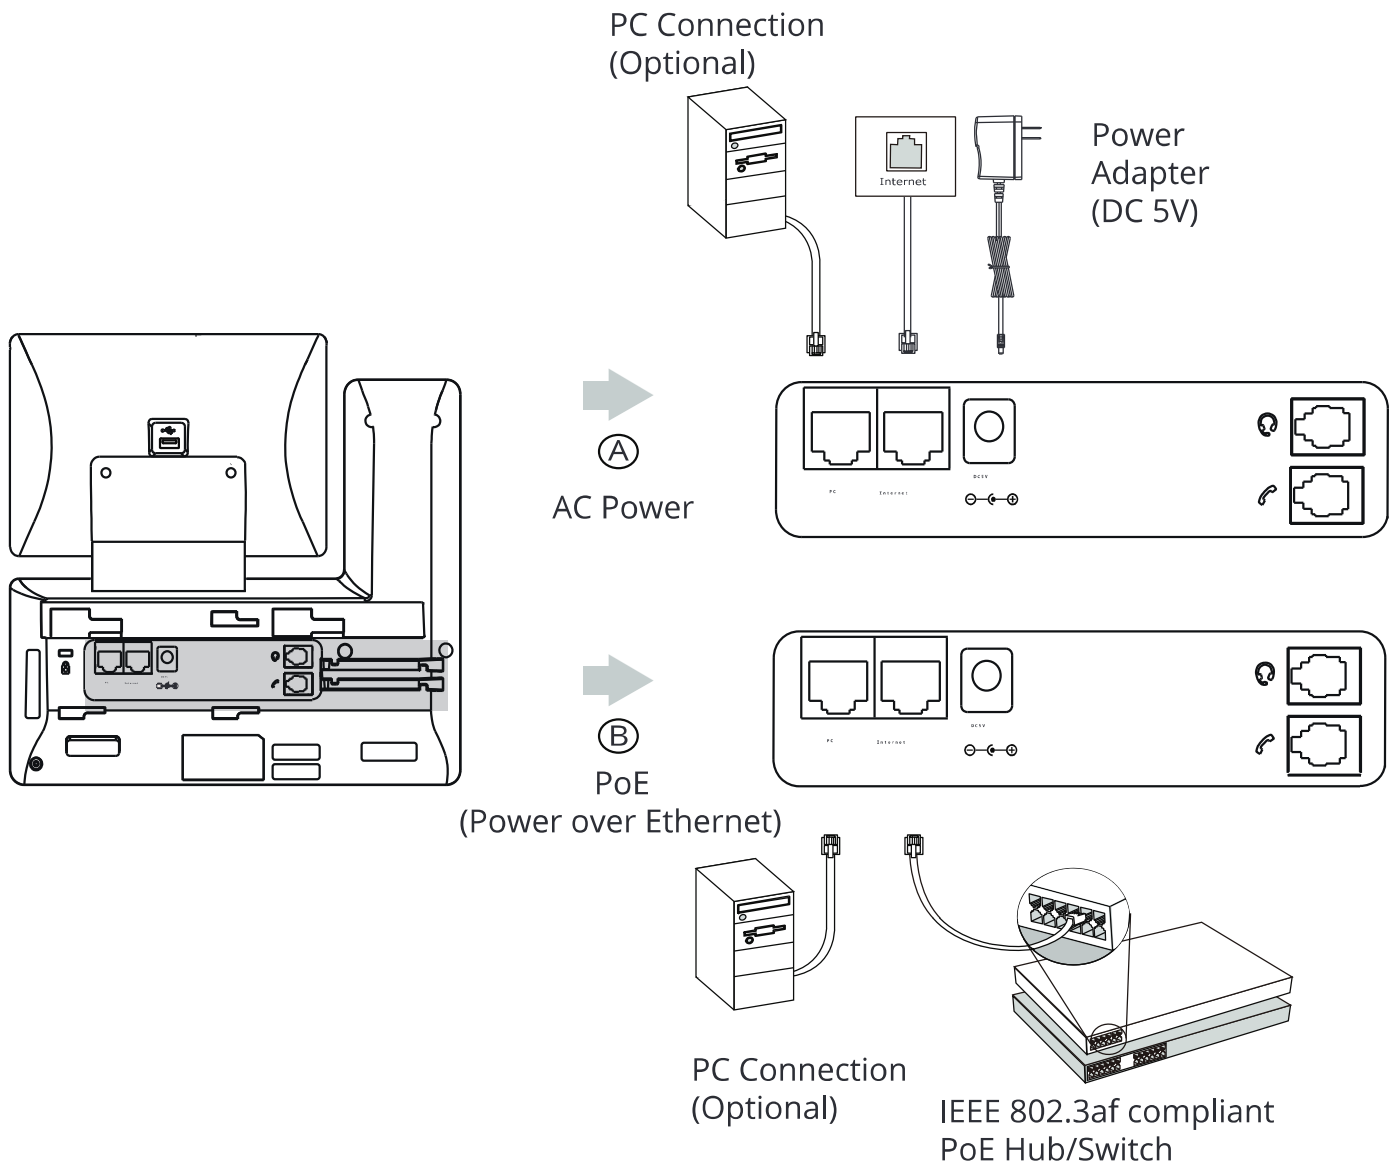
Voicemail Box Setup

RECORDING YOUR PERSONAL VOICEMAIL GREETING
1. Press the "Messages" ✉ button.
2. Enter the PIN provided to you by your Administrator, followed by the # key.
3. Select option 3 for personal options.
4. Select option 1 to record your voicemail greeting.
5. Follow the voice prompts to record and check your greeting.

CHANGING THE PIN FROM THE PHONE
1. Press the "Messages" ✉ button.
2. Enter the PIN provided to you by your Administrator, followed by the # key.
3. Select option 3 for personal options.
4. Select option 2 to change your PIN.
5. Enter the new PIN when prompted. Press # when done.

Commonly Used Features

PLACING OUTGOING CALLS

When the phone is not in use:

1. Pick up the handset or press the "Speakerphone" 🔊 button.
2. Dial tone will be heard.

When using a headset:
1. Press the "Headset" 🎧 button to activate headset mode.
2. No dial tone will be heard; Dial an extension or telephone number.

When you are already on a call:
1. Press the "Hold" ⏸ button or soft key.
2. Press the "New Call" soft key.
3. Dial an extension or telephone number.
4. Resume the original call by pressing the "Resume" soft key.

ANSWERING AN INCOMING CALL

On the Handset:
- Pick up the handset to answer the call.

On a Headset:
- When a headset is connected, press the "Headset" 🎧 button to answer the call.

On Speakerphone:
- Press the "Speaker" 🔊 button to answer the call.

REJECTING AN INCOMING CALL
Press the "Reject" soft key to immediately send the caller to voicemail.

IGNORING AN INCOMING CALL
Press the "Silence" soft key to ignore the incoming phone call.
Note: The caller will continue to hear ringing for the specified amount of time, defined in the phone's "No Answer Forwarding" settings.

ENDING A CALL
On a Handset:
- Hang up the handset or press the "More" soft key followed by the "EndCall" soft key.

On a Headset:
- Press the "More" soft key, followed by the "End Call" soft key.

On Speakerphone:
- Press the "Speakerphone" button.

HOLD
Placing a Call On Hold:
- While on a call, press the "Hold" button.

Retrieving Calls On Hold:
- Press the "Hold" button again, or press the "Resume" soft key.

MUTE
1. To mute the microphone on a call, press the "Mute" button.
2. To un-mute the microphone, press the "Mute" button again.

VOICEMAIL
1. Press the "Envelope" button.
2. Enter your PIN when prompted, followed by a #.

TRANSFERRING CALLS

Blind Transfers:
1. While on a call, press the "Transfer" ⊡ button.
2. Dial the desired phone number or extension number.
3. Press the "Transfer" ⊡ button again.
4. The call is automatically transferred.

Attended (Consultative or Warm) Transfers:
1. While on a call, press the "Transfer" ⊡ button.
2. Dial the desired phone number or extension number.
3. Wait for the party to answer to announce that you are transferring a call to them.
4. Press the "Transfer" ⊡ button to transfer the call.

CALL WAITING

While already on a call, and a new call rings in, you will hear a beep tone emitted by your phone.

To Answer the Second Call:
1. Press the "Answer" soft key to access that call. The first call will be placed on hold.
2. Once the second call has ended, resume the original call by pressing the "Resume" soft key.

To Reject the Second Call:
• Press the "Reject" soft key to immediately send the caller to voicemail.

VOLUME ADJUSTMENT

In-Call Volume:

- While on a call, press the "+" and "-" $\boxed{- \blacktriangleleft +}$ buttons to raise or lower the volume.

Ringer Volume:

- While the phone is not in use, press the "+" or "-" $\boxed{- \blacktriangleleft +}$ buttons to adjust the ringer volume on the phone.

SPEAKERPHONE

While the phone is not in use:

- Press the "Speakerphone" $\boxed{\blacktriangleleft)}$ button to activate the speakerphone and get dial tone for an outbound call.

While on a call on the handset or headset:

- Press the "Speakerphone" $\boxed{\blacktriangleleft)}$ button to continue the current call on the speakerphone.

While a call on speakerphone is active:

- Press the "Speakerphone" $\boxed{\blacktriangleleft)}$ button to hang up the current call.

FORWARDING CALLS

1. Press the "Menu" soft key.
2. Press the right arrow key to highlight "Features" and press the "Ok" button.
3. Press the "Ok" button while highlighting "Call Forward".
4. Press the "Ok" button or the "Enter" soft key.
5. If "Always Forward" is currently disabled, "Always Forward: Off" will be displayed.
6. Press the "Ok" button, followed by the left or right "Arrow" button to enable always forwarding. Next press the down "Arrow" button and enter a phone number, then press the "Save" soft key."
7. Enter a valid telephone number or extension.
8. Press the "Ok" button or the "Save" soft key.
   Disabling "Always Forward":

Disabling "Always Forward":

1. If "Always Forward" is currently enabled, "Always Forward: On" will be displayed.
2. Press the "Ok" button or the "Enter" soft key.
3. Use the left or right "Arrow" button to disable always forwarding.
4. Press the "Ok" button or the "Save" soft key.

"Busy Forward" and "No Answer Forward" can be set in a similar manner.

We are here to help.

[Visit the Univerge Blue Support Center](#)

OVER
$29 BILLION
REVENUE

#1

SMB & ENTERPRISE
COMMS WORLDWIDE

LEADER IN
BIOMETRICS

75 MILLION
GLOBAL USERS

125+
COUNTRIES

TOP 100
GLOBAL INNOVATORS
(THOMSON REUTERS)

RECOGNIZED
AS A LEADER
BY FROST & SULLIVAN
IN ENTERPRISE
COMMUNICATIONS
TRANSFORMATION

GLOBAL 100
MOST SUSTAINABLE
COMPANIES IN THE WORLD
(CORPORATE KNIGHTS)

107,000
TEAM MEMBERS
WORLDWIDE

4,000+
CHANNEL
PARTNERS

For further information please contact NEC Enterprise Solutions or:

About NEC Corporation – NEC Corporation is a leader in the integration of IT and network technologies that benefit businesses and people around the world. By providing a combination of products and solutions that cross utilize the company's experience and global resources, NEC's advanced technologies meet the complex and ever-changing needs of its customers. NEC brings more than 120 years of expertise in technological innovation to empower people, businesses and society.

MTP MY TEL PROS | UNIVERGE BLUE® CONNECT

My Tel Pros is a nationwide NEC Technology Services Distributor